
Measuring Guide

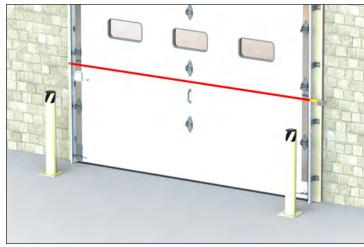



1

Track to bollard

To make sure you have clearance for your Rasco door.



Outside to outside of existing track

To ensure a proper fit with your door.



Distance from wall to furthest part of existing track at top of the opening

To ensure a proper seal on the sides, many tracks are farther away from wall at top of opening.

Wall to outside edge of roll or distance to back of roll

To ensure a tight seal on the sides.

