

## AIR INLET SCREEN - EASILY REMOVABLE

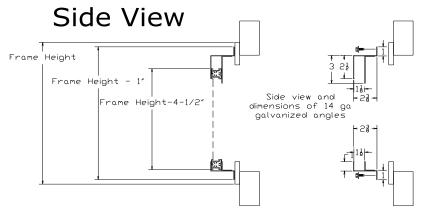

## Front View

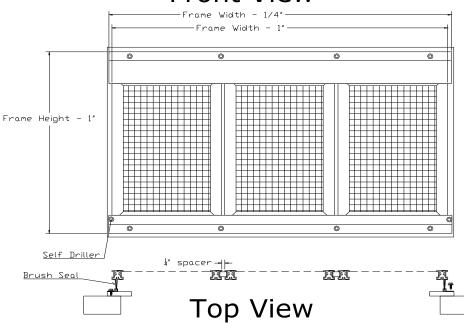

- 1.) Attach top and bottom "Z" brackets as shown to frame.
- (Make sure bottom can support weight)
- 2.) Cut brush down to fit and attach to frame with small self drillers.
- 3.) Lift up screen section into top "Z" bracket and let drop into bottom "Z" bracket.
- 4.) Slide section to end and repeat with other sections.
- 5.) Put self drillers at end of bottom "Z" bracket to keep sections tight.
- 6.) Caulk where needed.

AutoCad\Install\Easy Remove